



Installation Instructions
817490
 2009-22* RAM 1500
 4.7L, 5.7L HEMI ENGINE
 2/4 Wheel Drive & All Wheelbases
 With Factory Single Tailpipes
 *2019-24 Classic Body Only

OVERVIEW:

1. Take a moment to read and understand these instructions before installing your Flowmaster performance system.

NOTE: Please inventory all parts now before continuing and if necessary, report any missing items to our tech line. This will avoid potentially stranding your vehicle until any missing replacement parts arrive.

ITM #	PART #	DESCRIPTION	QTY.
1	TB467S	Adapter Pipe	1
2	8530572-Z	AMT Muffler	1
3	16629S	Right Tailpipe	1
4	16392S	Left Front Tailpipe	1
5	16393S	Left Rear Tailpipe	1
6	16662S	Rear Exit Pipes	2
7	16317S	Side Exit Pipes	2
8	ST396	Stainless Tips	2
N/A	PK552	Hardware Package includes:	1
9	MC250BS	2½" Band Clamps	5
10	MC300BS	3" Band Clamps	2
11	HA168	Rubber Hanger	1


REMOVE STOCK EXHAUST SYSTEM:

2. Raise vehicle up on a hoist or rack to working height. If you don't have access to a hoist or rack, support vehicle with jack stands.

WARNING:
 Avoid serious burns! Allow your vehicle time to cool completely before touching any factory engine components.

To ease preparation and installation of your new kit:


- Apply penetrating lubricant to mounts, bolts and clamps before you remove them.
- Use stands as necessary to support parts as you detach them from your vehicle and again as you install new parts.

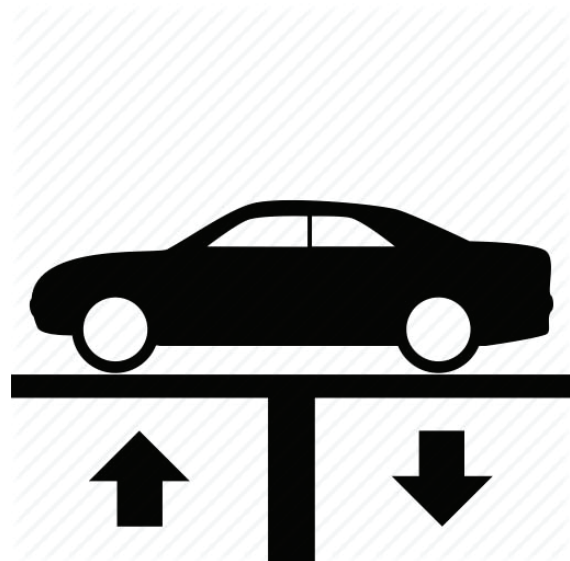


3. Cut tailpipes (x2) at muffler exit. Disassemble wire hangers from isolators and remove tailpipes from vehicle.



4. Support muffler with a stand, remove muffler wire hangers from isolators then loosen ring clamp at muffler inlet connection. Slide muffler off of front pipe and set aside.

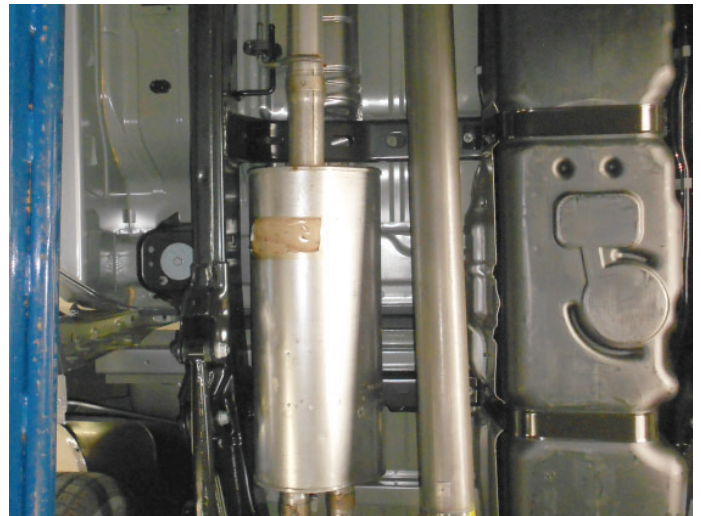

5. If your vehicle has electrical wiring routed along inside face of right frame; carefully release harness from frame by unclipping it. Then use cable ties to secure it to top of frame (or to harness already on top of frame, as shown).

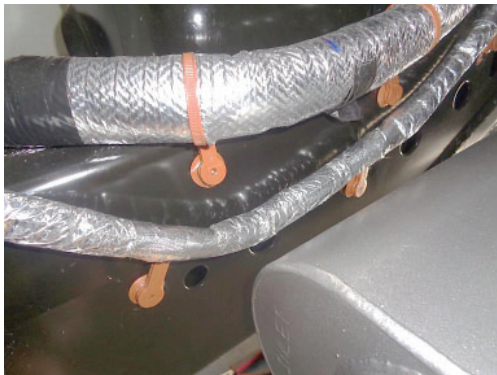

INSTALL FLOWMASTER EXHAUST SYSTEM

6. Remove nuts from stock and Flowmaster clamps, apply anti-seize compound to bolts and re-install nuts.

NOTE: The image in this step is intended for illustrative purposes only and may or may not accurately reflect components included in your kit.


7. Every slip fit connection in this kit must seat 3" deep except for muffler connections which must seat 2" deep. Find all slip fit components in your kit and mark them accordingly so your Flowmaster exhaust system fits properly onto your vehicle.




8. Place **clamp (10)** onto **adapter pipe (1)** then connect it to factory inlet pipe. Line up notch to tab on factory pipe then tighten clamp just enough to allow for adjustment.




9. Place **clamp (10)** onto **AMT muffler (2)** then connect it to adapter pipe. Tighten clamp enough to allow for adjustment then place **clamps (x2) (9)** onto muffler outlets.

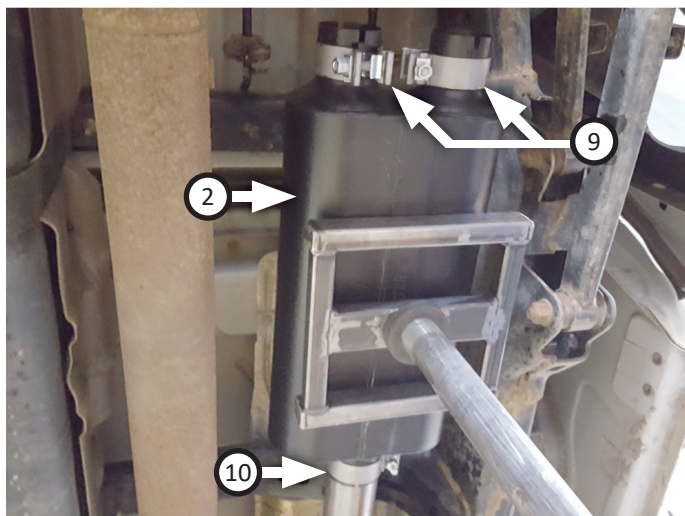


10. Route **right (3)** and **left front tailpipes (4)** over axle and connect them to muffler. Hang wire hangers into isolators and tighten clamps (x2) just enough to allow for later adjustment.

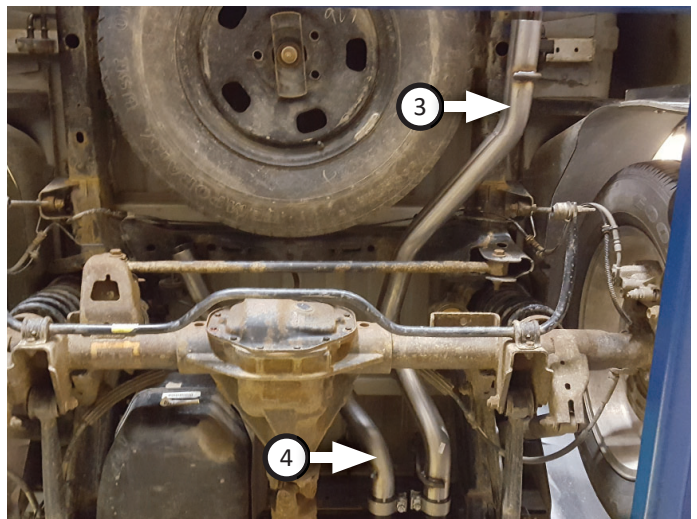

11. At rear of frame on driver side of vehicle (next to spare tire), is a pair of attached hanger mounts. Place **rubber hanger (11)** onto inner hanger.

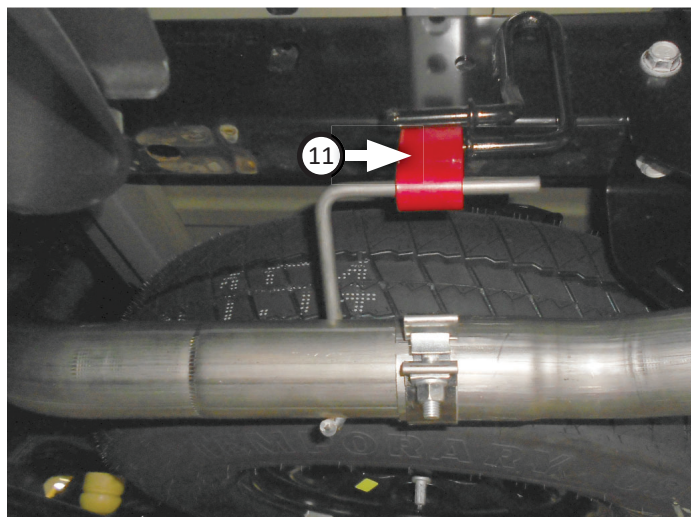


12. Place **clamp (9)** onto **left rear tailpipe (5)** and connect it to left front tailpipe. Set wire hanger at rear of tailpipe into rubber hanger, then tighten clamp just enough to allow for adjustment.

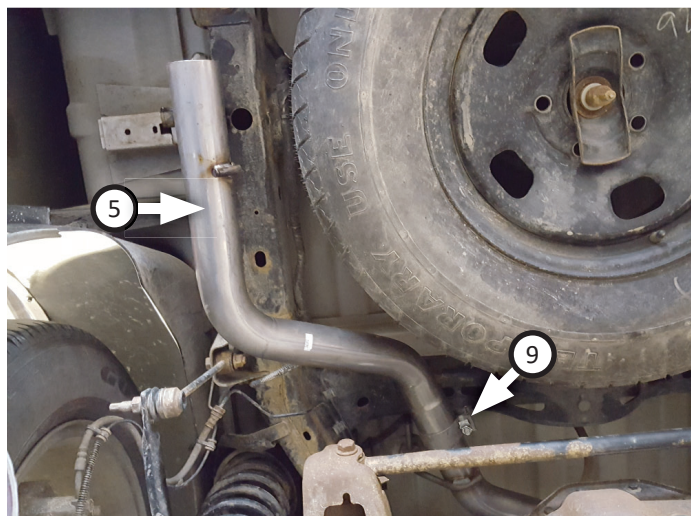


NOTE: This kit includes both side and rear exit pipes. A side exit is preferable for towing purposes, to avoid blowing fumes in or on vehicles you may be towing (eg: RV trailer, boat, etc). Otherwise, if you wish to equip your vehicle with a rear exit exhaust, use **rear exit pipes (6)** now in place of side exit pipes.


13. Place **clamps (x2) (9)** onto **side exit pipes (7)** then connect them to tailpipes. Tighten clamps enough to allow for adjustment.

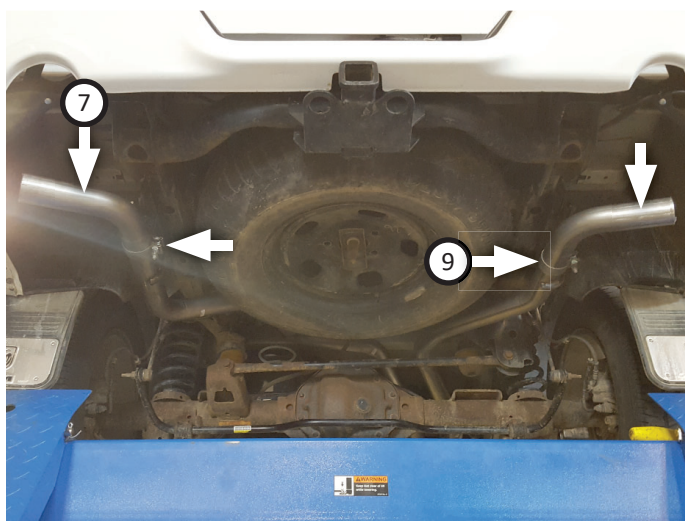

14. Place **stainless tips (8)** onto both exit pipes and adjust to desired position. Tighten pinch clamps enough to hold in place.
15. Adjust exhaust components for fit; maintaining 1/2" clearance and compensating for suspension, travel and vibration.
16. Recommended: Secure slip-fit connections with a 1-inch tack weld then spray high-temp paint over each weld to prevent rust and premature corrosion.

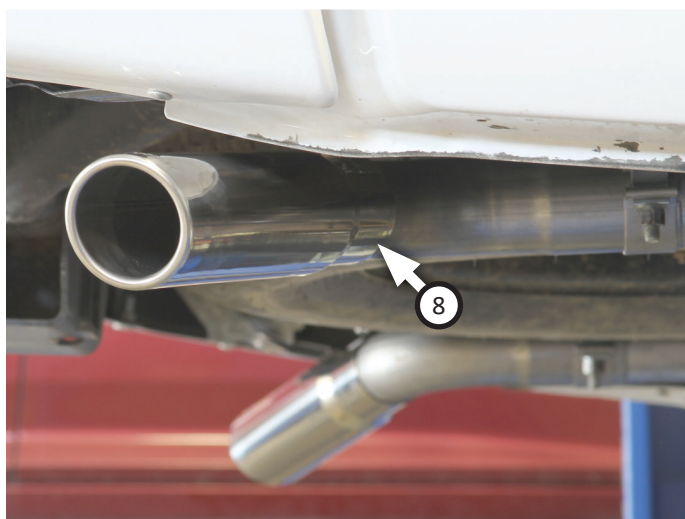

Congratulations, the installation of your FLOWMASTER performance exhaust system is now complete!

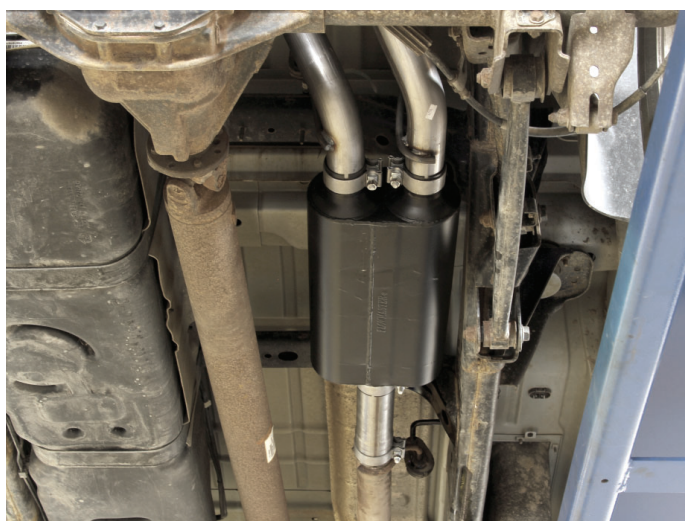



Installation Diagram
817490
2009-22* RAM 1500
4.7L, 5.7L HEMI ENGINE
2/4 Wheel Drive & All Wheelbases
With Factory Single Tailpipes
*2019-24 Classic Body Only

