



# FLOWMASTER® HEADER FLANGE KIT


STEP 1.

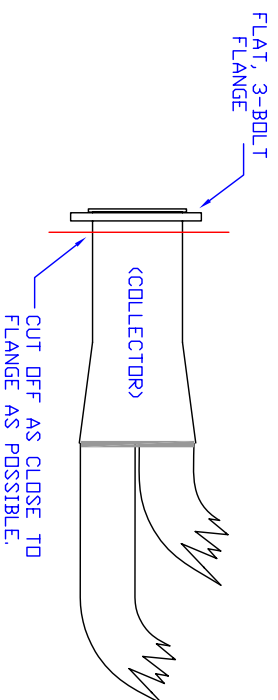


STEP 2.

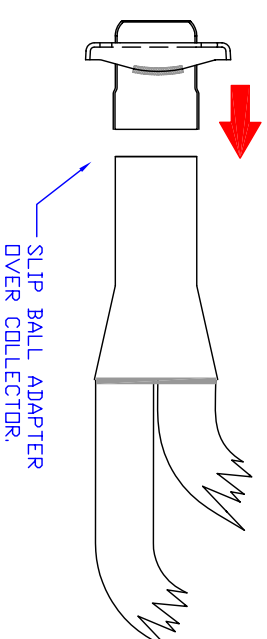

STEP 3.

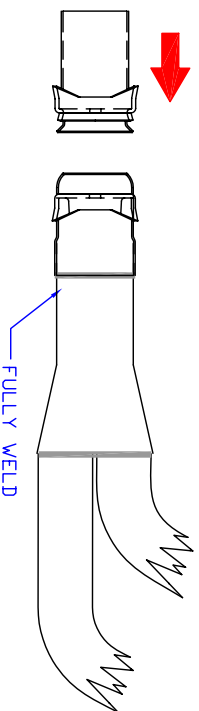

STEP 4.

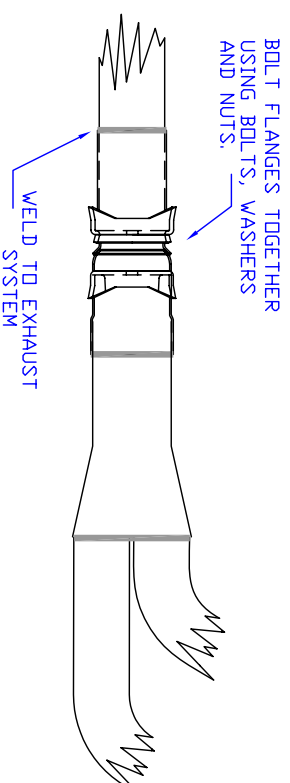

## PACKING LIST

15922	15923	15924	15925	15930
3 1/2" COLL. X 2 1/2" SYSTEM	3 1/2" COLL. X 3" SYSTEM	3" COLL. X 2 1/4" SYSTEM	3" COLL. X 2 1/2" SYSTEM	3" COLL. X 3" SYSTEM
<ul style="list-style-type: none"> <li>(2) 377TB- BALL ADAPTER</li> <li>(2) TB378- FLARE ADAPTER</li> <li>(2) SF001- FLANGE</li> <li>(1) PK357- HDWR. KIT</li> <li>(4) 3/8-NC X 2 1/4" HEX BOLTS</li> <li>(4) 3/8-NC HEX NUTS</li> <li>(4) 3/8 SPLIT LOCK WASHERS</li> <li>(4) 3/8 FLAT WASHERS</li> </ul>	<ul style="list-style-type: none"> <li>(2) 377TB- BALL ADAPTER</li> <li>(2) TB379- FLARE ADAPTER</li> <li>(1) PK357- HDWR. KIT</li> <li>(4) 3/8-NC X 2 1/4" HEX BOLTS</li> <li>(4) 3/8-NC HEX NUTS</li> <li>(4) 3/8 SPLIT LOCK WASHERS</li> <li>(4) 3/8 FLAT WASHERS</li> </ul>	<ul style="list-style-type: none"> <li>(2) 374TB- BALL ADAPTER</li> <li>(2) TB375- FLARE ADAPTER</li> <li>(2) SF003- FLANGE</li> <li>(1) PK357- HDWR. KIT</li> <li>(4) 3/8-NC X 2 1/4" HEX BOLTS</li> <li>(4) 3/8-NC HEX NUTS</li> <li>(4) 3/8 SPLIT LOCK WASHERS</li> <li>(4) 3/8 FLAT WASHERS</li> </ul>	<ul style="list-style-type: none"> <li>(2) 374TB- BALL ADAPTER</li> <li>(2) TB376- FLARE ADAPTER</li> <li>(1) PK357- HDWR. KIT</li> <li>(4) 3/8-NC X 2 1/4" HEX BOLTS</li> <li>(4) 3/8-NC HEX NUTS</li> <li>(4) 3/8 SPLIT LOCK WASHERS</li> <li>(4) 3/8 FLAT WASHERS</li> </ul>	<ul style="list-style-type: none"> <li>(2) 438TB- BALL ADAPTER</li> <li>(2) 439TB- FLARE ADAPTER</li> <li>(1) PK357- HDWR. KIT</li> <li>(4) 3/8-NC X 2 1/4" HEX BOLTS</li> <li>(4) 3/8-NC HEX NUTS</li> <li>(4) 3/8 SPLIT LOCK WASHERS</li> <li>(4) 3/8 FLAT WASHERS</li> </ul>